


REMOVING YOUR WATER PUMP

OP4

Your OP4 comes fitted with 2 water pumps and 2 water tanks. To locate your water pumps, please see the corresponding photo..

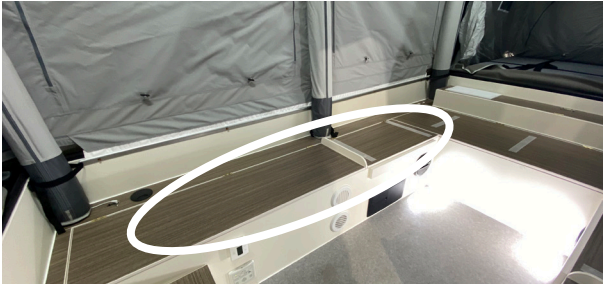


POWER OFF PUMPS

Turn off power -or- ensure both water pump switches are turned off



UNCLIP ELECTRICAL

Unsnap the black or white plastic clip from the wiring harness

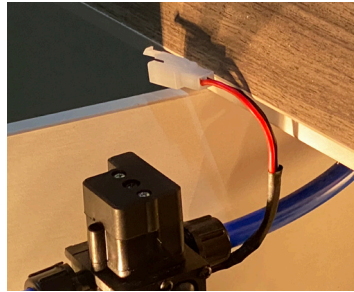


UNSCREW KNOBS

Unscrew black plastic retaining knob securing the blue hose to the pump




REMOVE BOTH KNOBS

Remove plastic retaining knobs from each side of the water pump

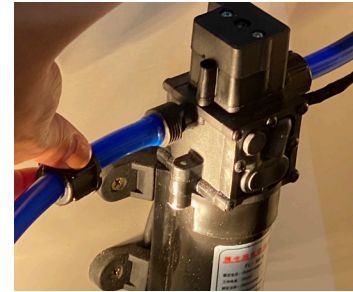

SAVE RETAINING KNOBS

Place retaining knobs somewhere safe - You will require them for replacement pumps.

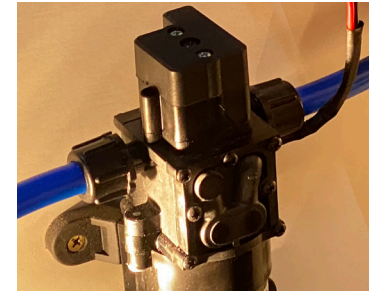

REMOVE HOSE

Place a towel under each blue hose as you pull it off the water pump.



CHECK SIDES

Ensure you have removed the hose and retaining knob from both sides of the pump.



LOCATE 4 SCREWS

Locate the 4 screws securing the pump into the side of your OP4,



REMOVE PUMP

Using a phillips screw driver remove all 4 screws and gently pull the water pump out.

